

# DEKO BLACK BOX QUICK START GUIDE

## FIRST

- Attach adapter and plug the record player in
- Remove the plastic needle guard
- Place the album on the turntable

## THEN

- Turn on the volume knob until it clicks and set between the min and max
- Choose speed by selecting the 33, 45, or 78
- Unlock the tone arm and using the small handle on the right side of the arm, place the needle at the beginning of the record
- The record will begin to play through the in-built speakers

## TO CONNECT TO STEREO

- Use the external RCA Jacks (red/white)

## TO CONNECT TO BLUETOOTH SPEAKERS

- Put the Bluetooth speaker in pairing mode
- Start playing the album
- Hit the **MODE** button to connect

## TO RECORD TO USB STICK OR SD CARD

- Insert USB stick or an SD Card
- Start the Album and quickly press the **MODE** button to start recording
- Lift arm to stop recording
- The music that was played will be recorded on the card or USB



**deko**  
*black box*

***the artist's choice turntable***

Features:

- Phono
- Bluetooth in & out
- USB & SD playback
- USB & SD recording for vinyl
- Aux in
- RCA out
- Earphone Jack

  
dekoentertainment.com

  
  
  
  
@dekoentertainment

**[www.dekoentertainment.com/dekoblackbox](http://www.dekoentertainment.com/dekoblackbox)**